

# Changing Glovebox Tanks

## Removal of Regulator

- Turn purifiers of all connected gloveboxes off.
- Close regulator connection to glovebox.
- Close tank.
- Open purge valve on regulator.
- Remove regulator.

## Changing of Regulator

- Attach regulator. **Do not overtighten!**
- Leak check (see SOP).
- Open tank.
- Open purge valve on regulator (10 seconds)
- Open connection to glovebox and purge for 10 mins.